

IPM511 | Slim-Grip™ Holder with Auto Sun Visor Mount for Apple iPhone® and iPod touch®



Package Contents:

- (1) SM050-2 - Slim-Grip™ holder for Apple iPhone and iPod touch®
- (1) CM011-2 - Sun visor mount
- (1) SP-SBH-KIT - Swivel Ball Head
- (1) AP2T17MM - Dual T-Tab Swivel Ball Adapter

Compatible with the following devices:

- Apple iPhone® 4
- Apple iPhone® 3GS
- Apple iPhone® 3G
- Apple iPhone® Original
- Apple iPod touch® - All models


*Apple®, iPhone®, and iPod touch® are trademarks of Apple Computer, Inc. Arkon Resources, Inc. is not affiliated with Apple Computer, Inc.

Sun Visor Mounting

! **Note:** Arkon strongly recommends using the visor mount on the passenger side sun visor. Using this mount on the driver's side visor will reduce the driver's view of the road.


Do not place device car charger cords in or near an air bag deployment zone.

Step 1. Lower the vehicle sun visor and place the clip mount over the top of the visor. Slide the mount left or right to adjust the location on the visor.

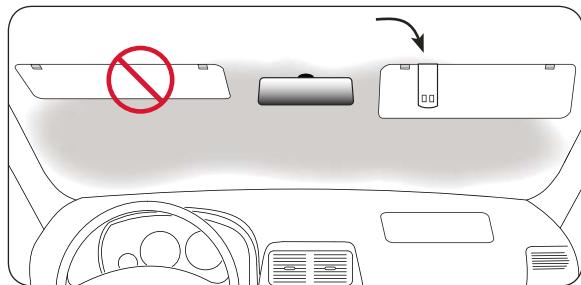


Connecting the Swivel Ball Adapter to the Dual T-Tab Mount

Step 1. Connect the dual T-slots (A) on swivel ball adapter to the dual T-tabs (B) on the sun visor mount.

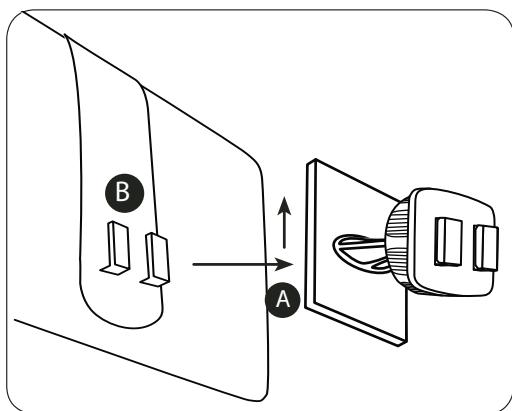


Install the Support Legs to the Holder

Step 1. Insert the holder support legs (C) by sliding them into the support leg grooves (D) on the top and bottom of the holder.

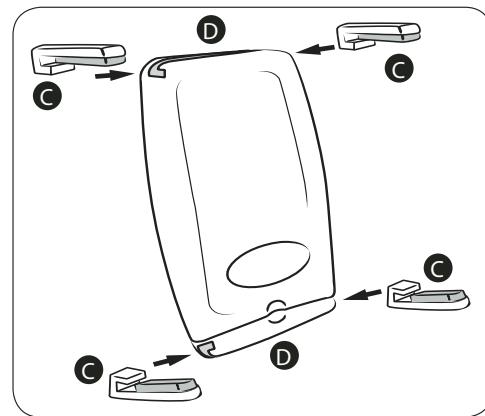

Connecting the Slim-Grip™ Holder to the Swivel Head Adapter

Step 1. Connect the dual T-slots (E) on holder to the dual T-tabs (F) on the pedestal head.

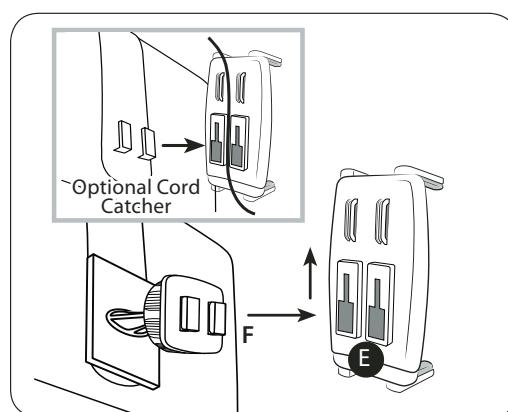

Continued on other side...



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON®
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com



Arcadia, CA 91006 USA

Designed in USA | Made in China

© Copyright 2010 Arkon Resources, Inc.

Insert Phone into Holder

Step 1. Secure holder with your hand for support, as spring-loaded mechanism requires significant force to operate. Hold your phone and insert into universal holder by pushing down on the bottom spring-loaded support legs with moderate amount of pressure (G). Slide the top of the device under the top support legs (H) until it fits snugly in the holder.

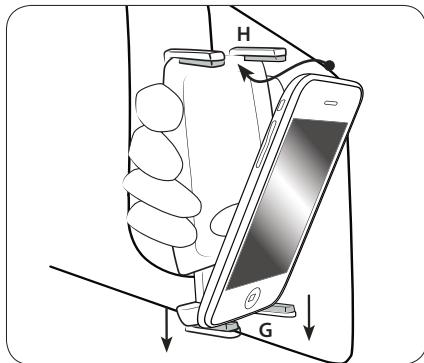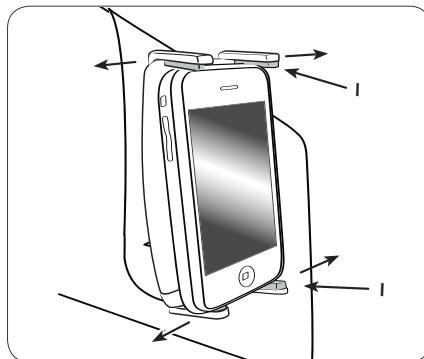**Adjusting Holder to Fit Phone**

Step 1. If necessary, adjust the support legs (I) on top and bottom by sliding them laterally to avoid any buttons or ports that may be on your phone.

**Safety Precautions**

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON®
RESOURCES INC.*The Mobile Mounting Specialists™*

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China

© Copyright 2010 Arkon Resources, Inc.